
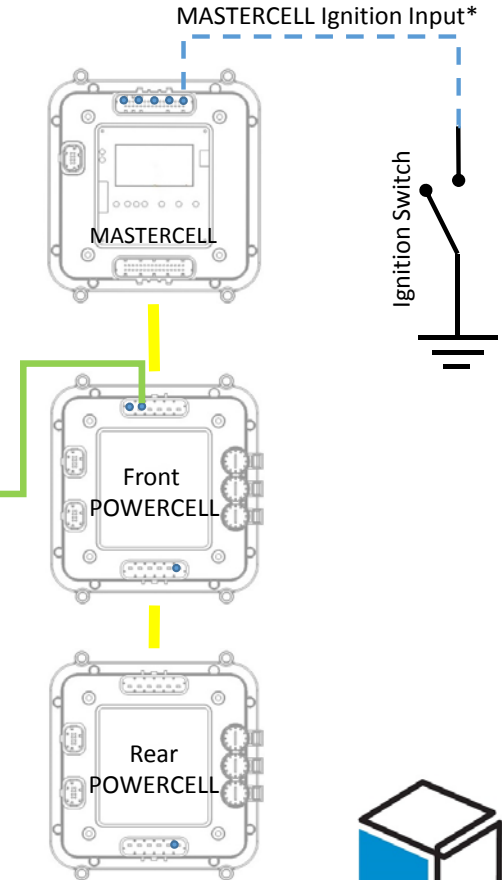


Wiring the MSD 6AL Ignition

- Heavy Red (Positive)- This wire connects directly to the battery positive (+) terminal or to a positive battery junction or the positive side of the starter solenoid. **Note:** Never connect this to the alternator.
- Heavy Black (Negative)- This wire connects to a good ground, either at the battery negative (-) terminal or to the engine.
- Red- This wire connects to the POWERCELL ignition output on the Infinitywire system. See your configuration sheet for the location and color of this wire.
- Connect the remaining wires according to the MSD instruction manual.

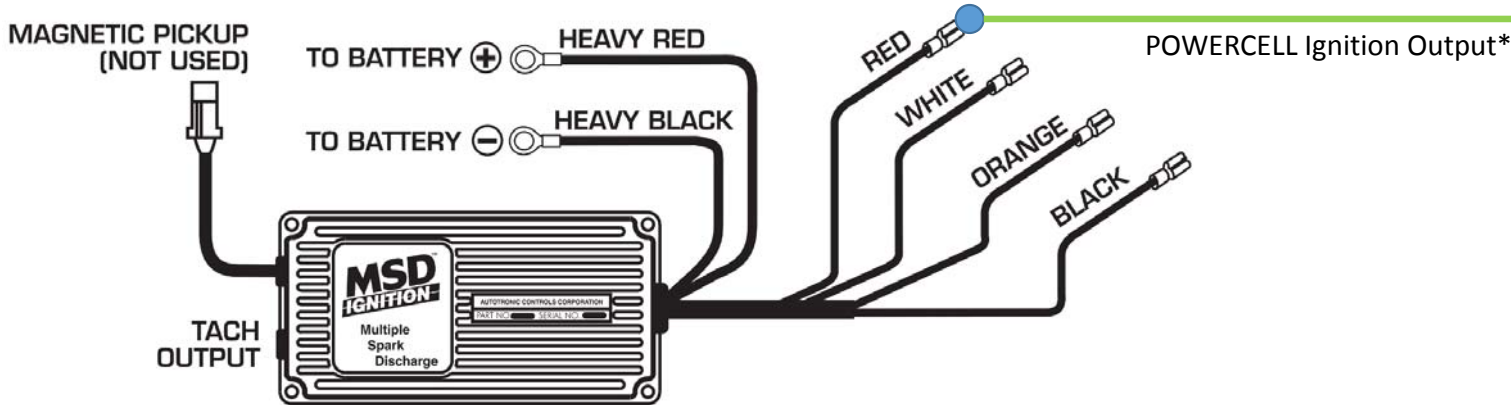

*NOTE: Infitwire wire Colors & Connector Positions will vary for different kits. See the Configuration Sheet that came with your kit for exact wire colors and locations.