

USING inLINK™ INSTRUCTIONS

Using inLINK™

inLINK behaves similarly to traditional key fobs in form but not in function. You will find that with ISIS™ and inLINK™, you can do much more. On the InLINK, each button corresponds to four different functions. Just change the page to access all of them.

To use inLINK™, simply press the button on the key fob which corresponds to the function you want. Pressing a button sends a message to the MASTERCELL™ Input Unit just like flipping a switch on the dash would. The specified output is then turned on in the POWERCELL™ control unit.

Accessing Different Pages

Pages are accessed by pressing the small button on the right side of the inLINK™ key fob. Page 1 is the default. One press will take you to page 2, two presses to page 3, and so on. inLINK™ will stay on that page for 10 seconds or until a button is pressed.


Security

NOTE: This does NOT lock the doors of the car. Activating Security disables the ignition and starter in the vehicle via the MASTERCELL, protecting the vehicle from thieves. When activated, the lights on the vehicle will flash a short pattern. When disabled the lights will flash a different pattern. Security will not enable when the ignition is on.


Panic Switch

When pressed, the panic switch will make the horn sound in a loud pattern until the button is pressed again to turn it off.


Page 1

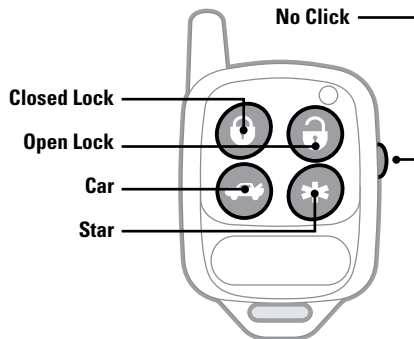

Page 2

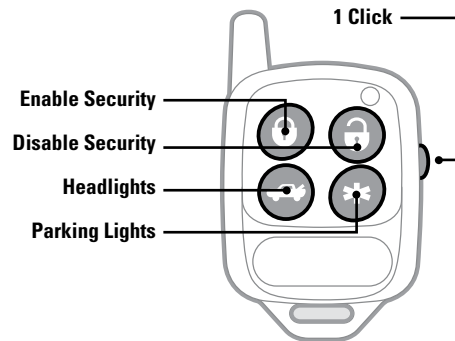

Page 3

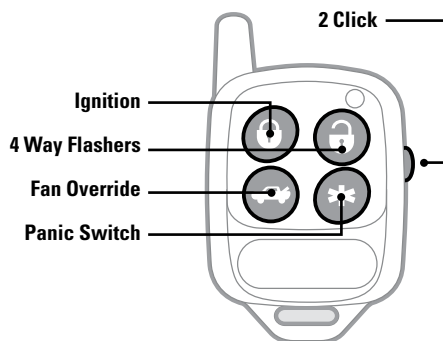

Page 4

