

# RCR SL-C Fuse Values

Output Number	POWERCELL 1	POWERCELL 2
1	10-Amp	10-Amp
2	10-Amp	10-Amp
3	20-Amp	10-Amp
4	20-Amp	OPEN
5	20-Amp	20-Amp
6	20-Amp	20-Amp
7	10-Amp	OPEN
8	10-Amp	OPEN
9	25-Amp	OPEN
10	25-Amp	15-Amp

