


## Controlling Headlights & High-Beams from SPDT Switch

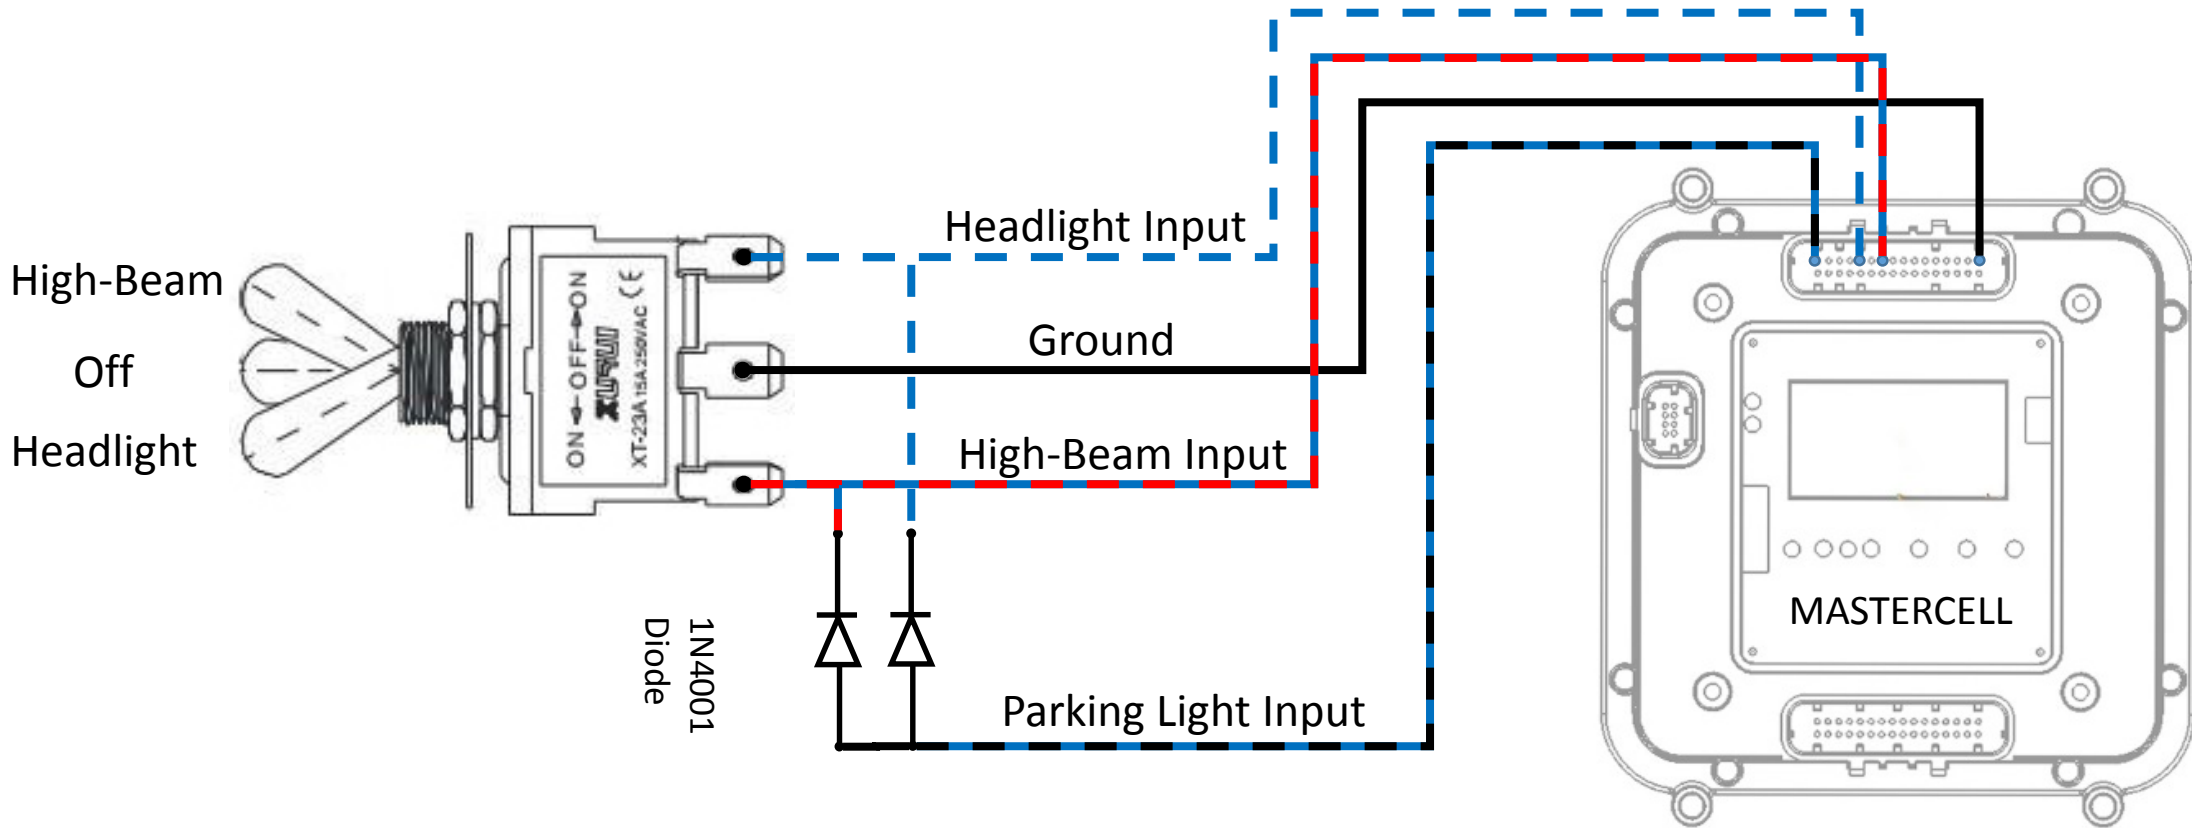

- \*NOTE: Infitwire wire Colors & Connector Positions will vary for different kits. See the Configuration Sheet that came with your kit for exact wire colors and locations.
- \*\*NOTE: MASTERCELL inputs must be ground switched. Applying 12-volts directly to an input will damage the MASTERCELL and void the warranty.
- \*\*\*NOTE: Some wires omitted for clarity. See your Infinitybox manual for full details

