 


TO EFI SYSTEM

Fuel Pump Ground Trigger







...or...


Fuel Pump Positive Trigger



Fuel Pump Input

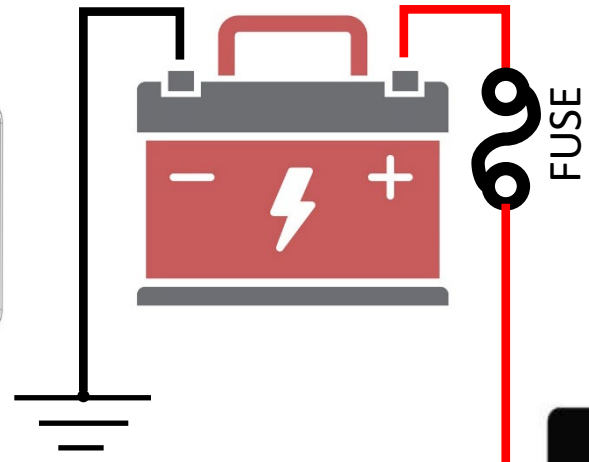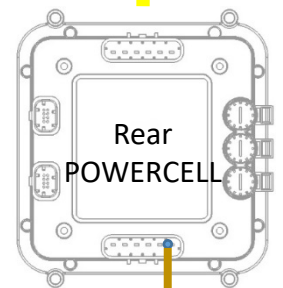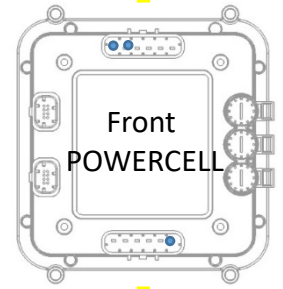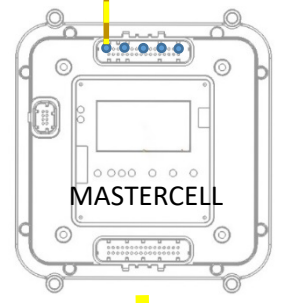

POWERCELL Fuel Pump Output\*


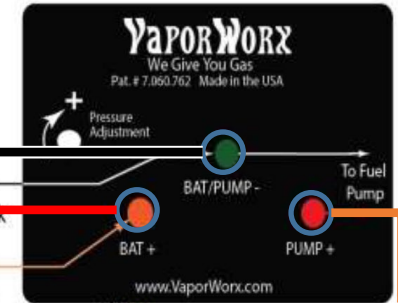


Bat NEG  
8/10ga Black

BAT POS  
8/10ga Org  
25-40A Fuse

- Pin A: Grey to fuel pressure sensor
- Pin B: Black to fuel pressure sensor
- Pin C: Brown from fuel pressure sensor
- Pin D: Blue fuel pump enable / Turn on from ECM
- Pin E: Orange/Black from engine MAP (-)
- Pin F: Lt. Green from engine MAP output

Pump NEG.  
Pump(s) POS

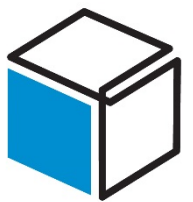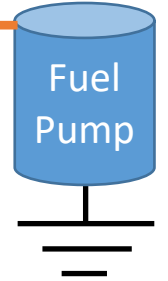

\*NOTE: Infinitybox wire Colors & Connector Positions will vary for different kits. See the Configuration Sheet that came with your kit for exact wire colors and locations.

\*\*NOTE: Read and understand the manual that came with your VaporWorx system before wiring. Some wiring omitted for clarity.