


## Wiring the Lokar Door HandleinMOTION NGX

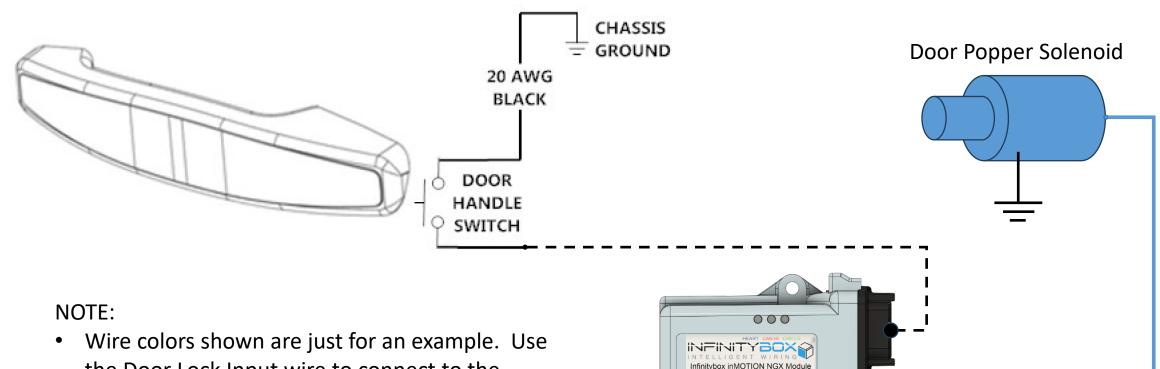

Driver Front Pass. Front

www.infinitybox.com

- Wire colors shown are just for an example. Use the Door Lock Input wire to connect to the Door Handle Switch and the Door Lock Output to connect to the Popper Solenoid
- Some wiring omitted for clarity. See your manual for the full wiring details

